


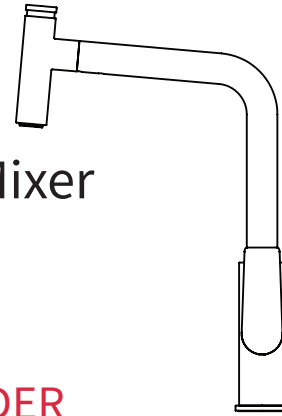


OLYMPIA  
Pullout Sink Mixer  
**VOP14**




Push Button ON/OFF Controller

WATER FLOW ON

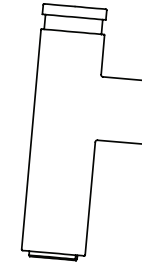

WATER FLOW OFF

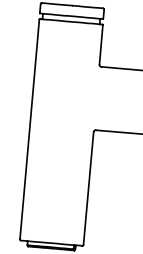


**IMPORTANT NOTICE FOR THE HOUSE HOLDER**

The VOP14 Pullout Sink Mixer features a push button ON/OFF controller on the handpiece. It is designed to be switched to the OFF (down) position for short periods of use whilst the sink is being used, and should not be used as an ON/OFF controller for extended periods, and/or whilst the sink mixer is not in use.


The Hot/Cold mixer lever should not be left in the OPEN position for extended periods with the handpiece control set to OFF (down), as the sustained water pressure could cause the pullout hose between the mixer and the handpiece to rupture.

Always return the Hot/Cold mixer to the CLOSED position and the Push button to the ON (up) position when you have finished using the sink mixer.

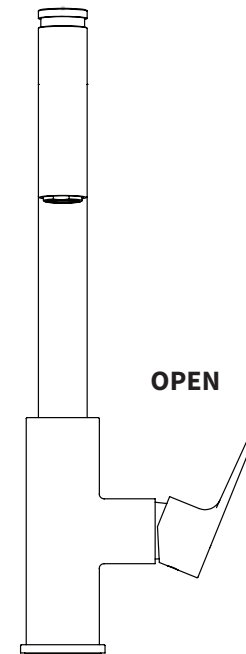

OPEN

Do not leave the mixer open when the sink mixer is not in use

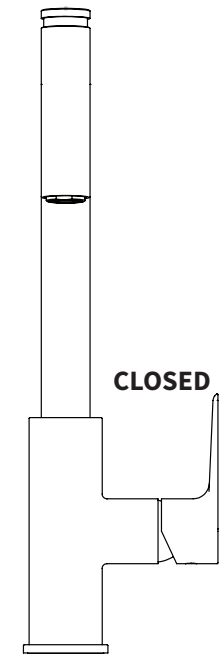

CLOSED

Always return mixer lever to closed position after use