


AEGIS-316

Slide Shower (Round) - 1 Function

VOD61RSS

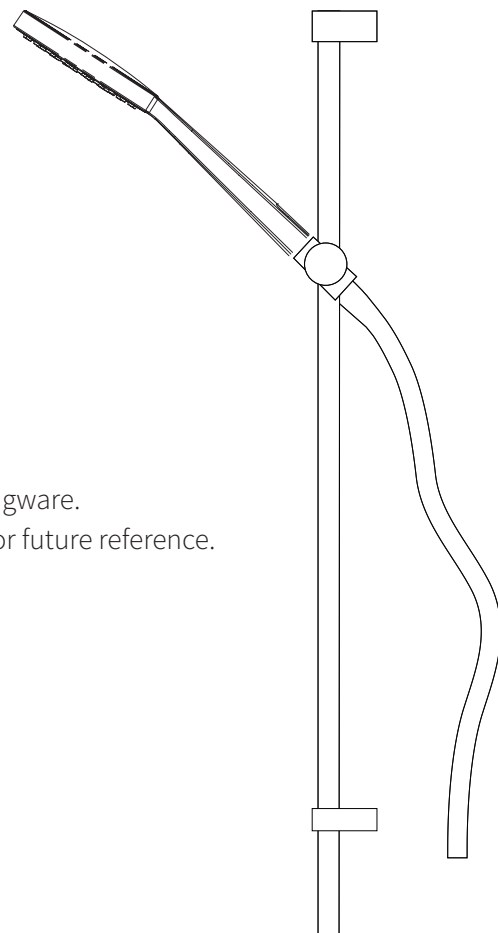

Congratulations on your purchase of this high quality product from Voda Plumbingware.
Please read the following before installation and retain (along with your receipt) for future reference.

TECHNICAL SPECIFICATIONS

Suitable for All Pressures

Minimum Pressure = 35kPa

Maximum operating Pressure = 500kPa* (As per NZ Building Code AS/NZ 3500)

Maximum operating Temperature = 65 deg. Celsius

For domestic use only.

CONFIGURATION



Mains Pressure systems Install the flow regulator as shown in the diagram below.

Unequal Low systems Install as supplied.

Equal Low systems Install as supplied.

CONTENTS


- Rail with adjuster/holder
- Fixing kit
- 1.5m shower hose
- Supply elbow
- Shower handpiece
- Flow Regulator for Mains Pressure installation

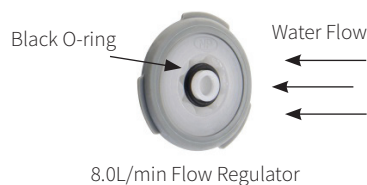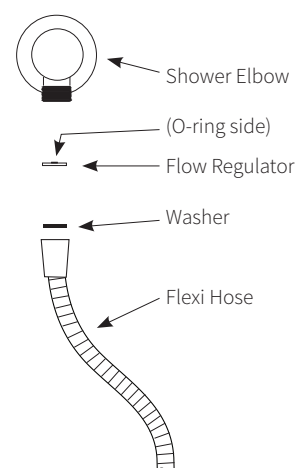

INSTALLATION

***FOR PRESSURES EXCEEDING 500kPa INSTALL A PRESSURE REDUCING VALVE. THOROUGHLY FLUSH ALL PIPES TO ELIMINATE ANY REMAINING DIRT AND RESIDUE, AND INSTALL INLINE FILTERS. FAILURE TO DO SO MAY VOID THE WARRANTY. TO BE INSTALLED AS PER THE REQUIREMENTS WITH AS/NZS 3500.**

ATTACH PROOF OF PURCHASE HERE

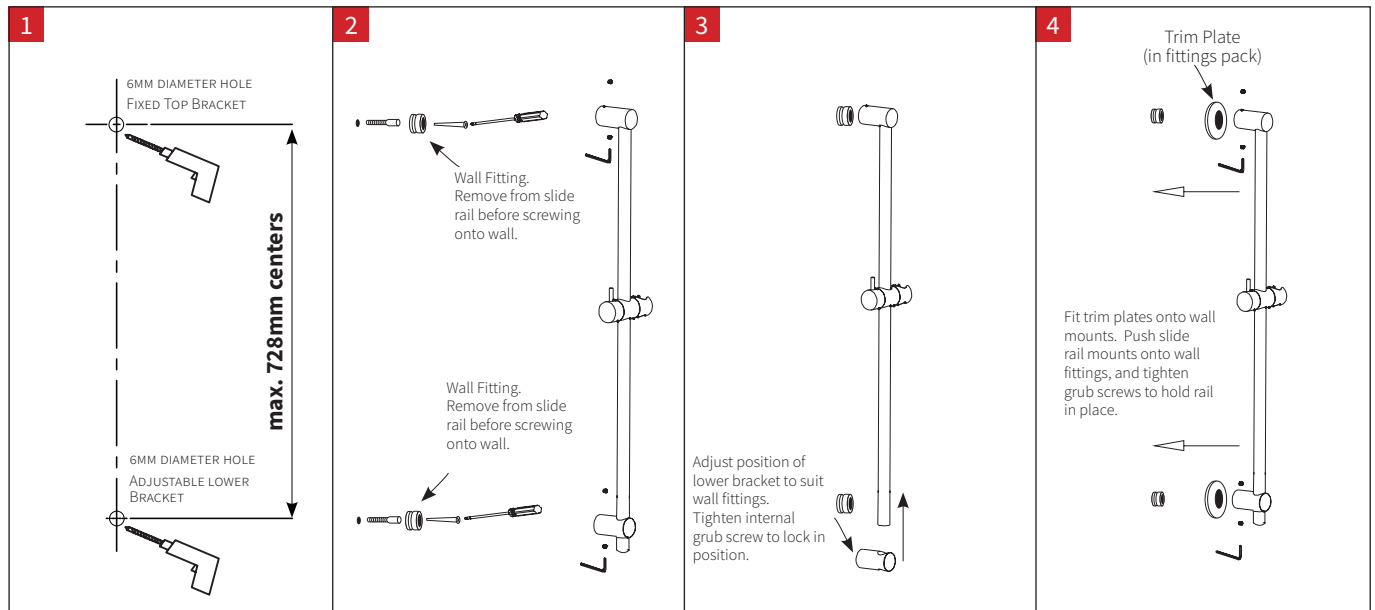

The shower rail has an adjustable lower bracket, however the distance between holes should be no more than 728mm apart.

Ensure main water supply is off before beginning installation.

- Measure, mark and drill holes for wall brackets. **(1)** Insert the wall plugs into drilled holes. **(2)**
- Unscrew the 2x grub screws **(2)** on each wall bracket retaining the stainless wall fitting. Screw the wall fittings onto the wall using the stainless screws provided **(2)**.
- Adjust the brackets on the rail to match the wall fittings. To adjust, unscrew the grub screw inside the bottom brackets, then slide the bracket up or down to match the spacing of the wall fittings. Retighten the grub screw inside the bracket.
- Fit the trim plates onto the mounts and fit onto the wall fittings **(4)**
- Tighten the 2x grub screws **(4)** on the top and bottom brackets.
- Attach the wall plate to the supply elbow and screw onto the spigot on the wall.
- Attach shower hose to supply elbow.
- Attach conical end with o-ring to the shower handpiece.
- Turn on water supply. Check for leaks and test for correct operation of shower and mixer.

WARRANTY

PLEASE CALL US BEFORE REMOVING SHOWER OR UNDERTAKING ANY REPAIR WORK.

Please refer to our website for warranty information: www.vodaplumbingware.co.nz/warranty

In the unlikely event that this product fails during its warranty period, phone our Customer Service team immediately on 0508 367 366 – as unauthorised removal of the product may void the warranty.

CARE AND MAINTENANCE

SHOULD BE CLEANED REGULARLY WITH DILUTED LIQUID DETERGENT AND DRIED WITH A SOFT CLOTH.

Surface buildup, salt water spray, oxidation, and/or tea-staining should be regularly removed with use of a suitable stainless steel cleaner/protector.

See website for full care instructions: www.vodaplumbingware.co.nz/tapware-care-instructions/