

ONYX

Slide Shower Wetrail Multi-function VOX63R

Congratulations on your purchase of this high quality product from Voda Plumbingware.
Please read the following before installation and retain (along with your receipt) for future reference.

TECHNICAL SPECIFICATIONS

Suitable for Mains Pressure only

Minimum Pressure = 150kPa

Maximum operating Pressure = 500kPa* (As per NZ Building Code AS/NZS 3500)

Maximum operating Temperature = 65 deg. Celsius

For domestic use only.

CONFIGURATION

Mains Pressure systems Install as supplied.

Unequal Low systems This product is not suitable for this type of water pressure.


Equal Low systems This product is not suitable for this type of water pressure.



INSTALLATION

***FOR PRESSURES EXCEEDING 500kPa INSTALL A PRESSURE REDUCING VALVE. THOROUGHLY FLUSH ALL PIPES TO ELIMINATE ANY REMAINING DIRT AND RESIDUE, AND INSTALL INLINE FILTERS. FAILURE TO DO SO MAY VOID THE WARRANTY. TO BE INSTALLED AS PER THE REQUIREMENTS WITH AS/NZS 3500.**

PRECONFIGURED FOR WET RAIL CONNECTION (SEE DIAGRAM OVERLEAF):

- Remove rail set from pack.
- Wetrail shower uses threaded male 15mm connection on bottom wall mount.
- Distance between upper and lower wall mounts should be at 850mm centers. Drill suitable sized hole to suit screw for upper mount. Wall anchor should be used if required.
- Unscrew retaining grub screws in upper and lower mounts.
- Remove wall fixing from inside of upper mount and affix mount to wall using supplied screw.
- Remove male threaded plumbing connection from bottom wall mount.
- **ENSURE FEMALE WALL PLUMBING CONNECTION IS FLUSH WITH OUTSIDE OF FINISHED WALL LINING**
- Using teflon tape or hemp and grease on threaded connection, screw MALE SHOWER FITTING into FEMALE WALL Plumbing connection using an 8mm Allen key to tighten.
- Test fit lower wall mount to ensure flush fit with wall lining. The Male Shower fitting can be adjusted slightly by unscrewing, however a minimum of six threads should be inside female fitting to ensure an adequate seal.
- Slide rail set onto bottom plumbing connection and top wall fitting, secure with the grub screws and Allen key.
- Fit hose and handset. Turn on mains supply and check for leaks.

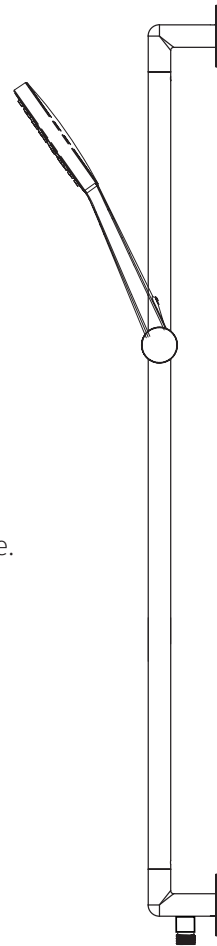

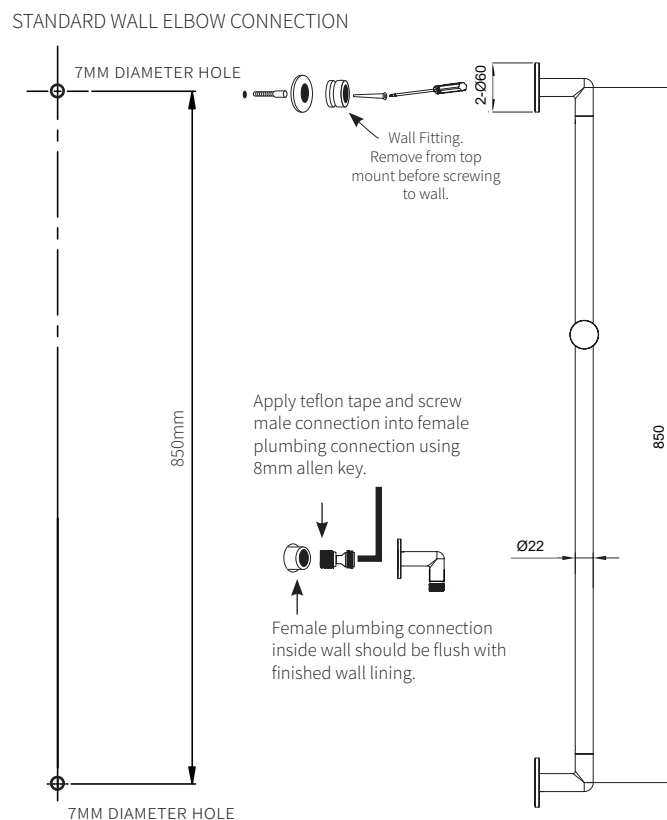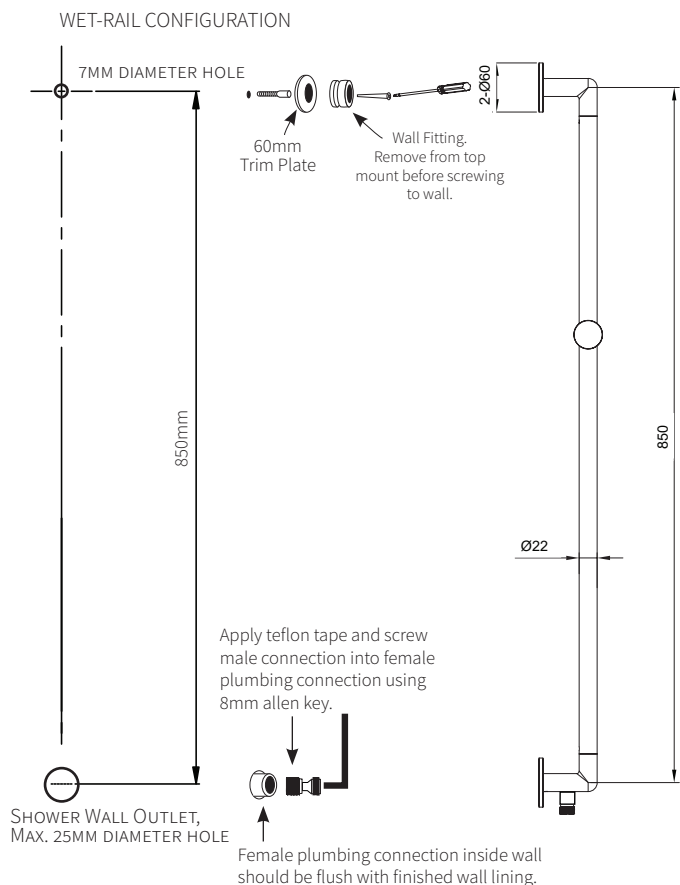

STANDARD CONFIGURATION USING WALL ELBOW:

- Standard configuration shower uses L-shaped threaded male 15mm elbow connection (in separate pack).
- Distance between upper and lower wall mounts should be at 850mm centers. Drill suitable sized holes to suit screw for upper and lower mounts. Wall anchors should be used if required.
- Remove the threaded Wet rail end from the rail by unscrewing small grub screw at back of rail and pulling off end of rail. Push standard lower wall mount (in separate pack) into end of rail, align with upper mount and tighten grub screw.
- Remove wall fixing from inside of upper and lower mounts and affix mounts to wall using supplied screws.
- Remove male threaded plumbing connection from wall elbow by unscrewing grub screw and pulling threaded end off elbow.
- **ENSURE FEMALE WALL PLUMBING CONNECTION IS FLUSH WITH OUTSIDE OF FINISHED WALL LINING**
- Using teflon tape or hemp and grease on threaded connection, screw MALE SHOWER FITTING into FEMALE WALL Plumbing connection using an 8mm Allen key to tighten.
- Test fit wall elbow to ensure flush fit with wall lining. The Male Shower fitting can be adjusted slightly by unscrewing, however a minimum of six threads should be inside female fitting to ensure an adequate seal.
- Slide rail set onto top and bottom wall fittings, secure with the grub screws and Allen key.
- Fit hose to elbow and handset. Turn on mains supply and check for leaks.

WARRANTY

PLEASE CALL US BEFORE REMOVING TAPWARE OR UNDERTAKING ANY REPAIR WORK.

Please refer to our website for warranty information: www.vodaplumbingware.co.nz/warranty

In the unlikely event that this product fails during its warranty period, phone our Customer Service team immediately on 0508 367 366 – Unauthorised removal of the product may void the warranty.

CARE AND MAINTENANCE

SHOULD NOT BE CLEANED WITH ACIDIC, CAUSTIC/ALKALINE, ABRASIVE OR CITRIC CLEANERS.

A soft, damp cloth is recommended for cleaning (Not a micro fibre cloth). Mild soap solutions can also be used on occasion.

See website for full care instructions: www.vodaplumbingware.co.nz/tapware-care-instructions/